




## Spare Parts List Pressure Filter for Sandwich Stacking DFZ up to 80 l/min, up to 315 bar

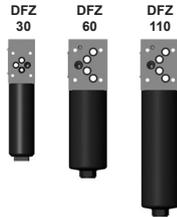

### 1. MAINTENANCE

#### 1.1 GENERAL

Please follow the maintenance instructions!

#### 1.2 INSTALLATION

Before fitting the filter into the system, check that the operating pressure of the system does not exceed the permitted operating pressure of the filter.

Refer to the name plate on the filter!

#### Important:

When using filters without bypass valve and at operating pressures above 20 bar, robust filter elements of the type BH4HC, OH/PS must be used for safety reasons.

#### 1.3 COMMISSIONING

Check that the correct filter element is fitted. Screw in bowl again fully and then unscrew by one quarter-turn (the sealing effect will not be improved by overtightening).

Switch on the hydraulic system and check filter for leakage.

Vent filter at an appropriate point in the system.

#### 1.4 TOOLS REQUIRED FOR MAINTENANCE

Size	Spanner for filter bowl	Spanner for VD 0 A.1
30	AF width 27	AF width 27
60, 110	AF width 27	AF width 27

#### 1.5 TORQUE VALUE FOR CLOGGING INDICATORS

Type	Max. torque
VD	100 Nm (for indicator B, C, D) 50 Nm (for indicator A, LE, LZ)

### 2. CHANGING THE ELEMENT

#### 2.1 REMOVING THE ELEMENT

1. Switch off hydraulic system and release filter pressure.
2. Unscrew filter bowl (drain fluid into a suitable container and clean or dispose of it in accordance with environmental regulations).
3. Remove filter element from element spigot in filter head (check surface of element for contamination residue and larger particles; these can indicate damage to components).
4. Replace or clean filter element (only V elements can be cleaned).
5. Clean filter bowl and filter head; particular attention must be given to the threads!
6. Examine filter, especially sealing surfaces, for mechanical damage.
7. Check O-rings – and replace if necessary

#### 2.2 FITTING THE ELEMENT

1. Wet the sealing surfaces and thread on the filter head and bowl, as well as the O-ring, with clean operating fluid.
2. Before fitting a new filter element, check that the designation corresponds to that of the old element.
3. Place filter element carefully onto the element spigot.
4. Screw in filter bowl fully and then unscrew by one quarter-turn.
5. Switch on hydraulic system and vent filter at a suitable point in the system.
6. Check the filter for leakage.


#### NOTICE:

Contamination or incomplete pressure release on disassembly can lead to seizing of the bowl thread.

Filter elements which cannot be cleaned must be disposed of in accordance with environmental protection regulations.

### 3. SPARE PARTS

#### 3.1 SPARE PARTS DRAWING DFZ

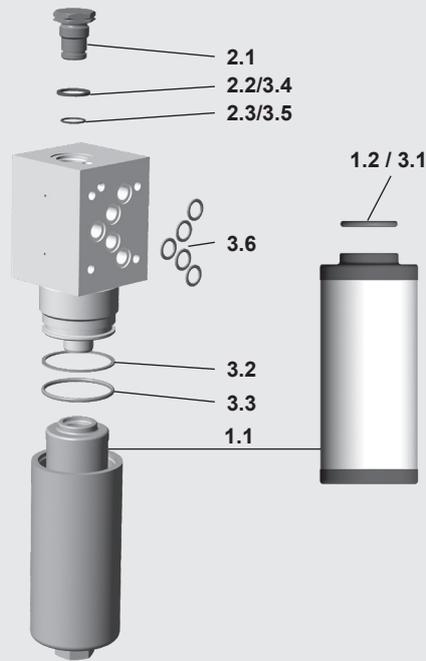

#### 3.2 SPARE PARTS LIST DFZ

Item	Consists	Description	30	60	110
1.		<b>Filter element</b>	see Point 4. Replacement elements		
	1.1	Filter element	0030 D...	0060 D...	0110 D...
	1.2	O-ring	12.37 x 2.62	22 x 3	22 x 3
2.		<b>Clogging indicator or screw plug</b>	See Point 5. Replacement clogging indicator		
	2.1	Screw plug VD 0 A.1 VD 0 A.1 /-V	00305932 00305931	00305932 00305931	00305932 00305931
	2.2	Profile seal ring	VM...	VM...	VM...
	2.3	O-ring	15 x 1.5	15 x 1.5	15 x 1.5
3.		<b>Repair kit DFZ</b> <b>Repair kit DFZ /-V</b>	00305867 01261048	01261049 00301791	
	3.1	O-ring (element)	12.37 x 2.62	22 x 3	22 x 3
	3.2	O-ring (bowl)	32 x 2.5	48 x 3	48 x 3
	3.3	Back-up ring (bowl)	DF...30 Z	DF...60 Z	DF...60 Z
	3.4	Profile seal ring (indicator)	VM...	VM...	VM...
	3.5	O-ring (indicator)	15 x 1.5	15 x 1.5	15 x 1.5
	3.6	O-ring (flange)	9.25x 1.78	12 x 2	12 x 2

Other spare parts on request

#### 4. REPLACEMENT ELEMENT

	0060 D 010 ON /-V
<b>Size</b>	0030, 0060, 0110
<b>Type</b>	D
<b>Filtration rating</b>	ON: 001, 003, 005, 010, 015, 020 BH4HC, ON/PS, OH/PS, V: 003, 005, 010, 020
<b>Filter material</b>	ON, BH4HC, ON/PS, OH/PS, V
<b>Supplementary details</b>	V, W (For description, see "DFZ" brochure)

#### 5. REPLACEMENT CLOGGING INDICATOR

	VD 8 D X /-L24
<b>Type of indicator</b>	VD differential pressure indicator up to 420 bar operating pressure
<b>Response pressure</b>	8 standard 8 bar, others on request
<b>Type of clogging indicator</b>	A with screw plug in indicator port B visual C electrical D visual and electrical
<b>Modification number</b>	X the latest version is always supplied
<b>Supplementary details</b>	L..., LED, V, W (for description, see "Clogging Indicators" brochure)

## 6. MAINTENANCE INSTRUCTIONS

### 6.1 USER INSTRUCTIONS FOR FILTERS



This pressure equipment must only be put into operation in conjunction with a machine or system.



The pressure equipment must only be used as stipulated in the operating instructions of the machine or system.



This pressure equipment must only be operated using hydraulic or lubricating fluid.



The user must take appropriate action (e.g. venting) to prevent the formation of air pockets.



Repair, maintenance work and commissioning must be carried out by specialist personnel only.

Allow the pressure equipment to cool before handling.

The stipulations of the operating instructions of the machine or system must be followed.



**Caution: pressure equipment! Before any work is carried out on the pressure equipment, ensure the pressure chamber concerned (filter housing) is depressurised.**



On no account must any modifications (welding, drilling, opening by force etc.) be carried out on the pressure equipment.



It is the responsibility of the owner to comply with the water regulations of the country concerned.



Statutory accident prevention regulations, safety regulations and safety data sheets for fluids must be observed.



Filter housing must be earthed.



When working on, or in the vicinity of, hydraulic systems, naked flames, spark generation and smoking are forbidden.



Hydraulic oils and water-polluting fluids must not be allowed to enter the soil or watercourses or sewer systems. Please ensure safe and environmentally friendly disposal of hydraulic oils. The relevant regulations in the country concerned with regard to ground water pollution, used oil and waste must be complied with.



Whenever work is carried out on the filter, be prepared for hot oil to escape which can cause injury or scalding as a result of its high pressure or temperature.



When using electrical clogging indicators, the electrical power supply to the system must be switched off before removing the clogging indicator connector.

### Customer Information in respect of Machinery Directive 2006/42/EC

Hydraulic filters are fluid power parts/ components and are therefore excluded from the scope of the Machinery Directive. They do not bear the CE mark. Before using these components, ensure compliance with the specifications provided by HYDAC Filtertechnik GmbH in this documentation.

The specifications also contain information on the relevant essential health and safety requirements (based on Machinery Directive 2006/42/EC) that are to be applied by the user.

We hereby declare that the filters are intended to be incorporated into machinery within the terms of the Machinery Directive 2006/42/EC.

It is prohibited to put the filters into service until the machinery as a whole is in conformity with the provisions of the Machinery Directive. Furthermore, our Terms of Sale and Delivery are available on our website ([www.hydac.com](http://www.hydac.com)).

### SERVICE ADDRESSES

**HYDAC Service GmbH**  
Postfach 1251  
66273 Sulzbach / Saar, Germany

#### Factory address:

Werk 13  
Friedrichsthaler Str. 15  
66540 Neunkirchen / Heinitz  
Germany

#### ServiCenter:

Tel.: +49 (0) 6897 / 509-9083  
Fax: +49 (0) 6897 / 509-9881

#### Customer service:

Tel: +49 (0) 6897 / 509-412  
Fax: +49 (0) 6897 / 509-828

### 6.2 MAINTENANCE, GENERAL

This section describes maintenance work which must be carried out periodically. The operational safety and life expectancy of the filter, and whether it is ready for use, depend to a large extent on regular and careful maintenance.

### 6.3 MAINTENANCE MEASURES

- Spare parts must fulfil the technical requirements specified by the manufacturer. This is always ensured when using original HYDAC spare parts.
- Keep tools, working area and equipment clean.
- After disassembling the filter, clean all parts, check for damage or wear and replace parts if necessary.
- When changing a filter element, a high level of cleanliness must be observed!

### 6.4 INTERVAL BETWEEN ELEMENT CHANGES

In principle we recommend that the filter element is changed after 1 year of operation at the latest.

We recommend installing the filter with a clogging indicator (visual and/or electrical or electronic) to monitor the filter element.

If the clogging indicator responds, it is necessary to change or clean the filter element without delay (only W and V elements can be cleaned).

When no clogging indicator has been fitted, we recommend changing the elements at specific intervals.

(The frequency of changing the filter elements depends on the filter design and the conditions under which the filter is operated.) When filter elements are subject to high dynamic loading it may prove necessary to change them more frequently. The same applies when the hydraulic system is commissioned or repaired or when the oil is changed.

The standard clogging indicators only respond when fluid is flowing through the filter. With electrical indicators the signal can also be converted into a continuous display on the control panel. In this case the continuous display must be switched off during a cold start or after changing the element.

If the clogging indicator responds during a cold start only, it is possible that the element does not yet need to be changed.

### NOTE

The information in this brochure relates to the operating conditions and applications described. For applications and operating conditions not described, please contact the relevant technical department. Subject to technical modifications.